Installation Instructions

SOLSERENE 48" SQUARE ACOUSTICAL PANEL

PARTS LIST:
- Two (2) panels
- Eight (8) Angled Impaling Clips (use four [4] per panel)
- Sixteen (16) anchor screws

TOOL LIST:
- #2 Phillips screwdriver
- Level
- Painters tape (optional)
- 3/16" carbide tipped drill bit (for pre-drilling concrete, block, brick, or plaster)

CAUTION:
Clean, cut-resistant gloves should be worn as Angled Impaling Clips and anchor screws have sharp points.

MOUNTING:
1. Determine the placement of the panel on the wall.
   A. Tip: use painters tape to mark the wall.
2. Attach recommended number of Angled Impaling Clips to wall, ensuring that they are at least three (3) inches away from all edges of panel.
   A. Keep Angled Impaling Clips level to ensure the panel will engage all Angled Impaling Clips evenly.
3. Position panel 5/8" above final placement position and lightly touching the points of the Angled Impaling Clips.
4. With your hands placed flat on panel face, firmly push the panel down and toward the wall until it is firmly seated on the Angled Impaling Clips.
   A. Position a wooden block on edge of panel and use a hammer to lightly tap for fine adjustment. If panel has to be adjusted up, remove and re-seat panel on clips, do not tap upwards.
5. Inspect the edges of the panel where it meets the wall. The gap should be consistent around the entire perimeter of the panel.

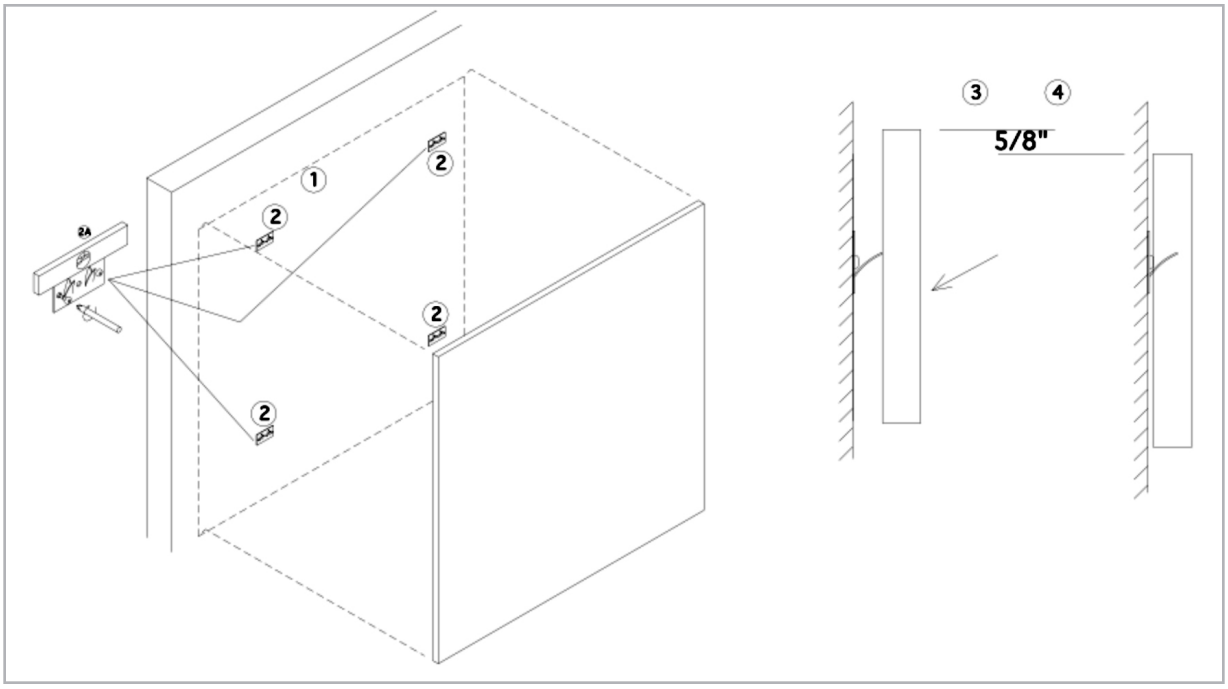

CDC CORPORATION
800 Gustafson Road
Ladysmith, Wisconsin 54848

1-800-932-2383
www.occommercial.com

© 2014 Owens Corning. All Rights Reserved.
LEED is a registered trademark of U.S. Green Building Council.